
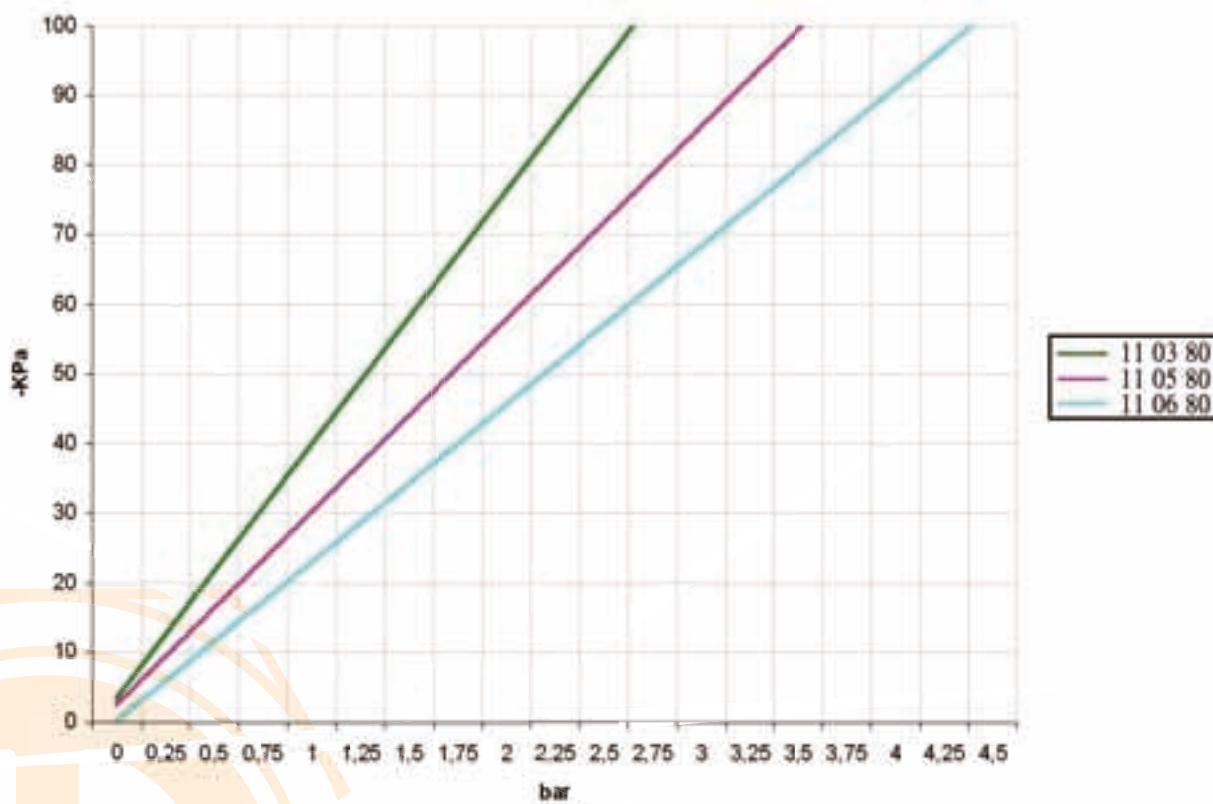


DIAGRAMS REFERRING TO THE VACUUM LEVEL ACCORDING TO THE SERVO-CONTROL SUPPLY PRESSURE

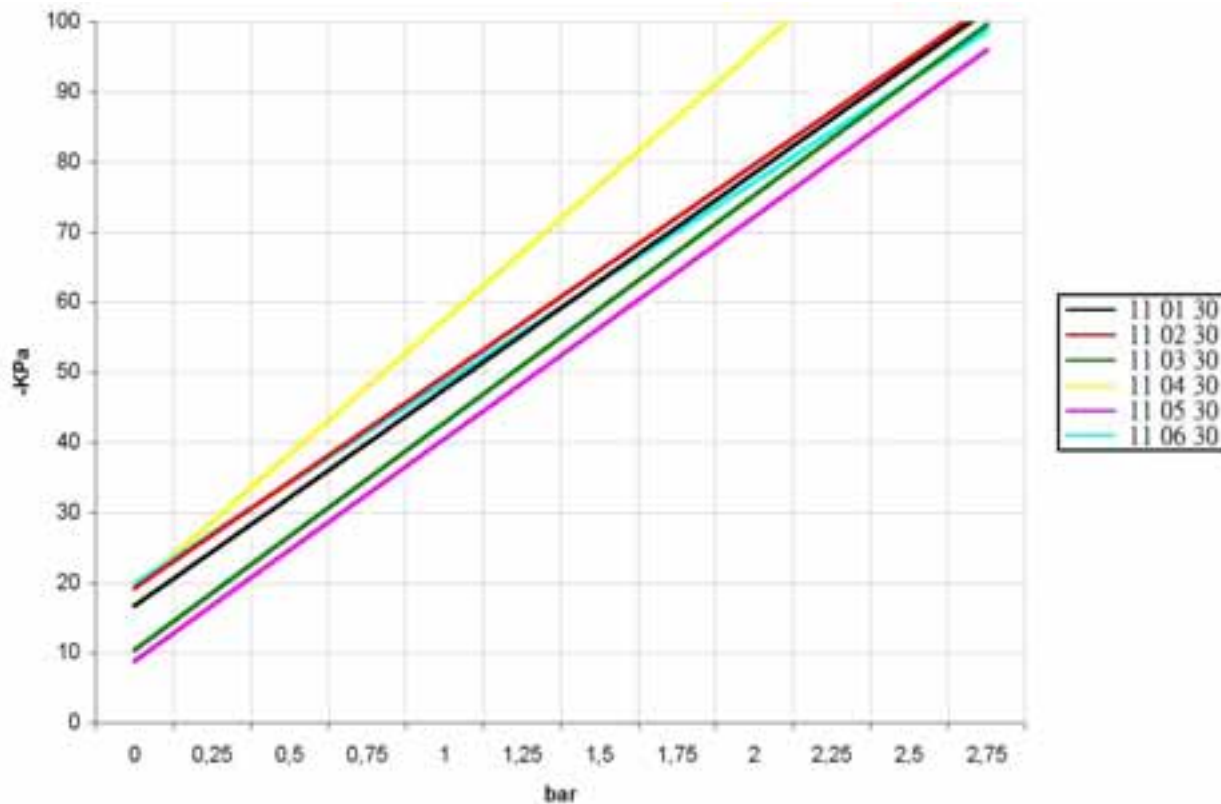

Note: The values shown in these tables are purely indicative, since they depend on the atmospheric pressure, on the capacity of the vacuum source and on the quality of the compressed air supply.